

High Performance Cool Air Intake Kit



INSTALLATION INSTRUCTIONS

S&B P/N 75-2503

1988-1995

**Ford F-150, F-250, F-350,
Bronco**


4.9L, 5.0L, 5.8L, 7.5L

Qty	Parts List	Qty	Parts List (continued)	Tools Required
1	5/8" x 25" Hose	1	Angled Bracket	2 7/16" Wrenches or Sockets
1	Duel Flange Adapter	3	1/4"-20 x 3/4" Hex Head Screw	5/16" Nut Driver or Socket
1	CARB Sticker	7	1/4" Washers	5/16" Drill & Drill Bit
1	Instruction Sheet	3	1/4"-20 Nylock Nuts	
1	#8 Hose Clamp	1	1/4"-20 Hex Head Screws	
2	#48 Hose Clamps	1	5/8" x 5/8" Coupling Hose	
		1	Air Filter	

1. With engine off, disconnect the negative battery cable.




2. Unclamp intake hoses from the air box.

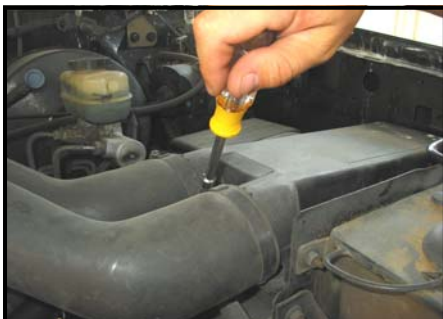

3. Unbolt the air box



4. Remove vent hose from air box and valve cover.

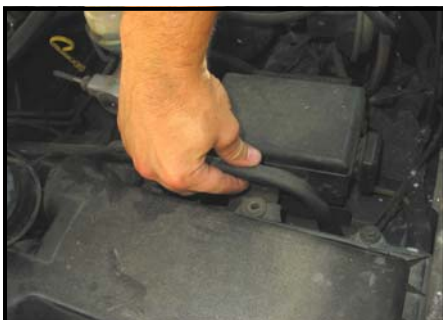


5. Remove air box.



6. Install the "L" bracket to the end of the filter as shown.



7. Install adapter assembly to filter.

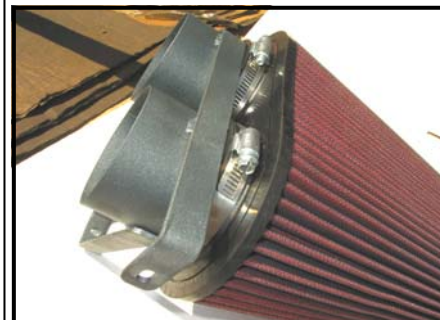

8. Position assembly in vehicle and mark locations for drilling as shown in #8A and #8B.



#8A

#8B



9. Drill 5/16" holes where marked.



10. Install using the hardware provided in this kit.



11. Measure vent hose provided in this kit (or the OEM hose).



INSTALLATION INSTRUCTIONS (continued)

12. Cut and install vent hose.



13. Reconnect the negative battery cable and check all of the final assembly connections to ensure that all connections are tight.



PERFORMANCE TESTING

- * Engage parking brake and start your engine. To ensure that the system was installed properly, listen for abnormal noises. If an air leak is detected, re-inspect hoses and connections as they may need to be tightened.
- * S&B FILTERS RECOMMENDS THAT YOU KEEP YOUR OEM INTAKE SYSTEM IN THE EVENT IT IS REQUIRED IN THE FUTURE.
- * In order to maintain proper warranty, all connections and components must be checked periodically for re-alignment and to tighten all connections. Failure to do so will void your warranty.
- * Use only S&B cleaning and oil products to service your filter. Using other company's oil and cleaner products may void your warranty.

Call (909) 947-0015 should you have any questions or comments.

Smog Certification Note:

The California Air Resource Board (CARB) requires that an E.O. identification label be applied to the vehicle in order to pass a smog check inspection when a High Performance Intake Kit has been installed.

You must place the E.O. label provided on or near the intake kit after installation so that a smog check technician can easily verify the E.O. number.



787 S. Wanamaker, Ontario, CA 91761
(909) 947-0015 Phone • (909) 947-0603 Fax
www.sbfilters.com